FIG. 5


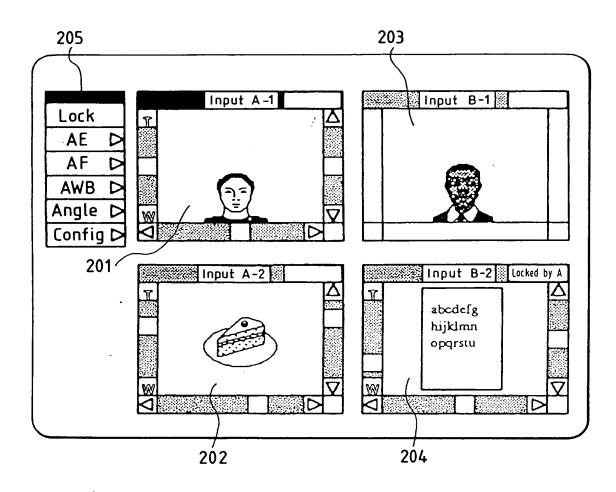


FIG. 6 312 315 408 314 311-303 401~ Lock 313~ ΑE 402--305 D AF 403 -302 310-AWB 404--304 Angle D 316-405 -301 Config D 406-407 307 309 306 308


### FIG. 8A


Lock	
AE	Δ
AF	٥
AWB	Δ
Angle	Δ
Config	Δ

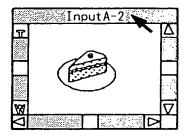

IF A TITLE BAR OF DISPLAY WINDOW OF CAMERA A-2 IS CLICKED BY POINTING DEVICE, CAMERA A-2 BECOMES OPERABLE. POSITION OF THUMB OF PANNING BAR IS DECIDED BY ATTRIBUTE AND CONDITION INFORMATION OF CAMERA A-1.


#### FIG. 8B




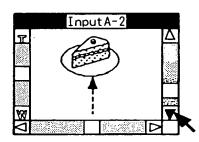

WHEN DOWNWARD PANNING BUTTON OF VERTICAL PANNING BAR IS KEPT CLICKED BY POINTING DEVICE OR THUMB IS DRAGGED DOWNWARD, TRIPOD OF CAMERA A-2 IS CONTROLLED AND CAMERA A-2 IS PANNED DOWNWARD.


### FIG. 8C




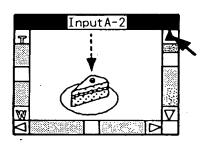

WHEN UPWARD SCROLL BUTTON OF VERTICAL PANNING BAR IS KEPT CLICKED BY POINTING DEVICE OR THUMB IS DRAGGED UPWARD, TRIPOD OF CAMERA A-2 IS CONTROLLED AND CAMERA A-2 IS PANNED UPWARD.


## FIG. 8D




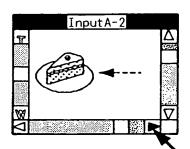

WHEN RIGHTWARD SCROLL BUTTON OF HORIZONTAL PANNING BAR IS KEPT CLICKED BY POINTING DEVICE OR THUMB IS DRAGGED RIGHTWARD, TRIPOD OF CAMERA A-2 IS CONTROLLED AND CAMERA A-2 IS PANNED RIGHTWARD.

# FIG. 8E



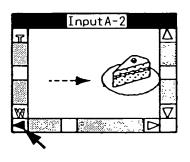

WHEN LEFTWARD SCROLL BUTTON OF HORIZONTAL PANNING BAR IS KEPT CLICKED BY POINTING DEVICE OR THUMB IS DRAGGED LEFTWARD, TRIPOD OF CAMERA A-2 IS CONTROLLED AND CAMERA A-2 IS PANNED LEFTWARD.


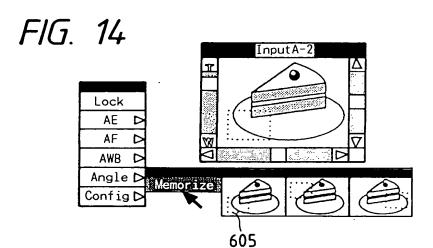



FIG. 15A

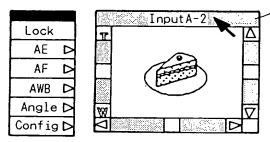

312

IF TITLE BAR OF DISPLAY WINDOW OF CAMERA A-2 BY POINTING DEVICE AT TERMINAL STATION B, CAMERA A-2 BECOMES CONTROLLABLE BY STATION B.

FIG. 15B

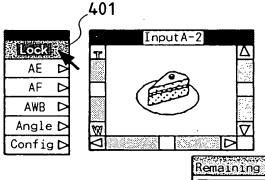

IF LOCK MENU IS CLICKED, CURRENT SETTING CONDITION OF CAMERA IS FIXED (INHIBITED TO BE CHANGED BY OTHER TERMINAL). LOCK STATUS IS LIMITED IN TIME AND REST OF TIME IS DISPLAYED.






FIG. 15C



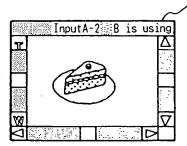

314

IT IS DISPLAYED IN WINDOW OF CAMERA A-2 AT TERMINALS OTHER THAN TERMINAL B THAT TERMINAL B IS IN USE.